

ISOLOG 3D MOBILE

QUICK GUIDE



- 1 X-axis sensor
- 2 Y-axis sensor
- 3 Z-axis sensor
- 4 Power on/off
- 5 Select axis
X/Y/Z-axis or chop-mode (rotates around X/Y/Z axis)
- 6 Select chop rate
1 HZ up to 50 kHz (adjustable in 16 steps)
- 7 Preamp on/off
- 8 Select sensor
loop for lower / dipole for higher frequency range
- 9 activate local control (disconnect from pc)
- 10 LED's
X/Y/Z red = activ sensor or alternating for chop mode
SENSOR green = loop / red = dipole
PREAMP red = on / black = off
REMOTE red = connected to pc
BATTERY red = charging / green = charged
- 11 N-Type rf connector
female / optional male
- 12 USB connector
for antenna control via included pc software
not for battery charching
- 13 Power connector
for battery charging with included 12V Powersupply