

# Fiber Care

## HANDLING INSTRUCTIONS



ALWAYS HANDLE PRECISE  
OPTICAL MEASUREMENT  
SYSTEMS **WITH CARE**



**CAP END FACE**  
WHEN CONNECTOR  
IS NOT IN USE



BARE FIBER SHOULD NOT  
SUPPORT THE **WEIGHT OF**  
**THE CONNECTOR**



**INSPECT** THE END FACE OF  
THE FIBER FOR DUST OR  
IMPERFECTIONS



AVOID ANY UNNECESSARY  
FORCE THAT MAY CAUSE  
THE FIBER TO **BEND**  
**SHARPLY AND BREAK**



**CLEAN** ANY DIRT FROM THE END  
FACE WITH ISOPROPANOL AND  
A LINT-FREE WIPE OR WITH THE  
FIBER CLEANING KIT

## STORAGE



**SHORT TERM**  
COILED DIAMETER  
**> 6 cm**



**LONG TERM**  
COILED DIAMETER  
**> 10 cm**

provided by

 **LUMILOOP**  
LASER-POWERED SENSOR SYSTEMS

Distributed by: Reliant EMC LLC, 3311 Lewis Ave, Signal Hill CA 90755, 408-916-5750, [www.reliantemc.com](http://www.reliantemc.com)