


Maintenance and consumables list for SM-UV800-C


Maintenance:

1. Clean the surface of the lamp regularly once every 3 months. Wipe the lamp gently with non-woven cloth by alcohol. The grease and scale will affect the efficiency of UV light and lamp life.
2. Water tank must be filled with pure water or distilled water to ensure clean water. Poor water quality will affect the life of the heater in the humidification tank.
3. Clean the water filter and scale in the inner chamber regularly once every 3 months

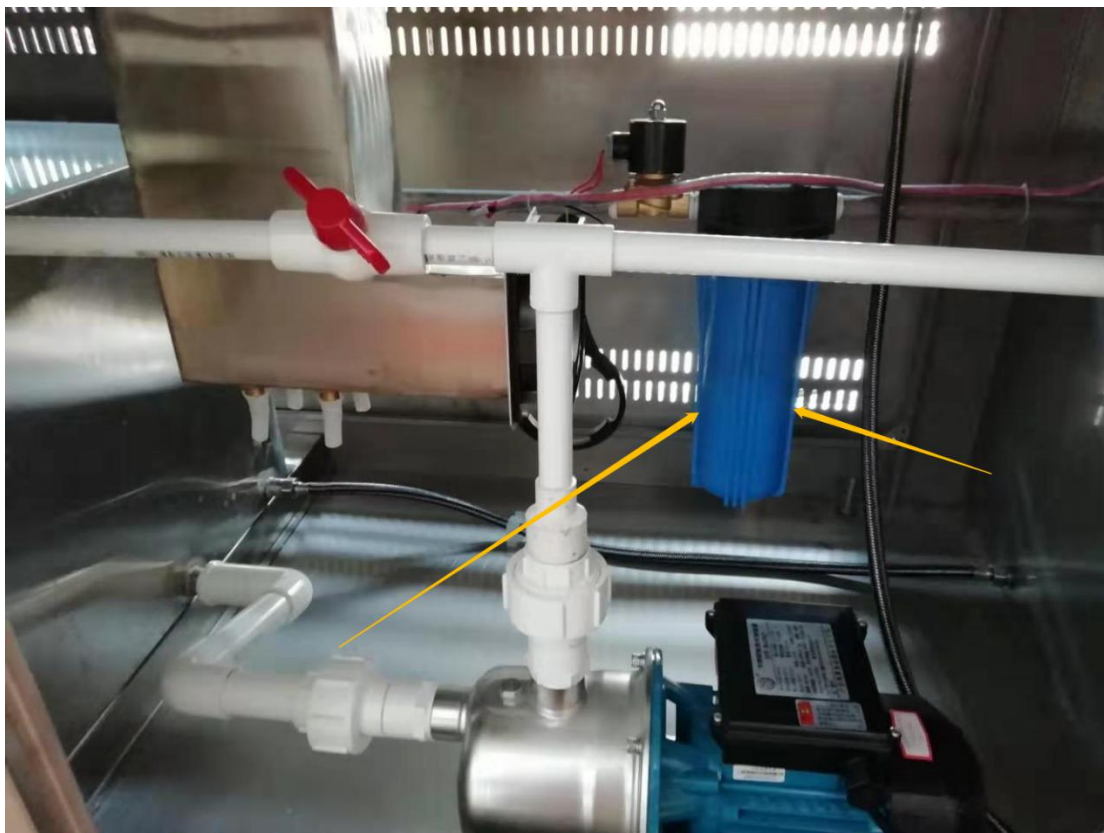

Maintenance and consumables list for SM-UV800-C

4. Check whether the electrical components are loose and broken skin or not once every month. Remember power off check, do not operate with electricity.

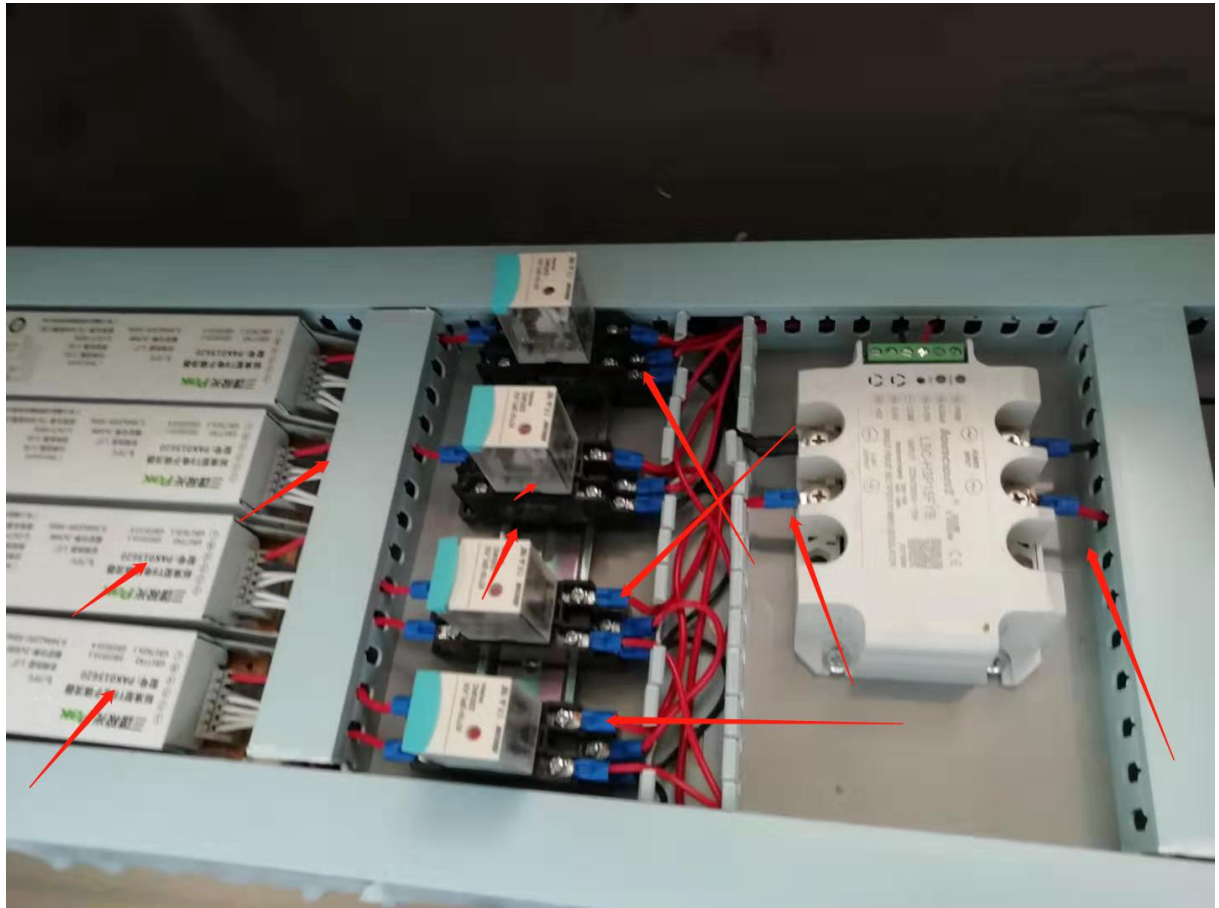

Consumables list:

1. Humidification tube (2KW)
2. UVA lamp (320nm-400nm), UVB lamp (280nm-320nm)
3. Water level float (stainless steel)