


Optical fiber lead through:

- You will need a stick (*Sticklers Ref. MCC-XMT*) and isopropanol.
- Carefully insert the stick moistened with isopropanol in the fiber optic outlet until it stops (about 1cm). Do this by turning the stick, in order to improve the cleaning effect.
- Do not use force, it has to be easy.

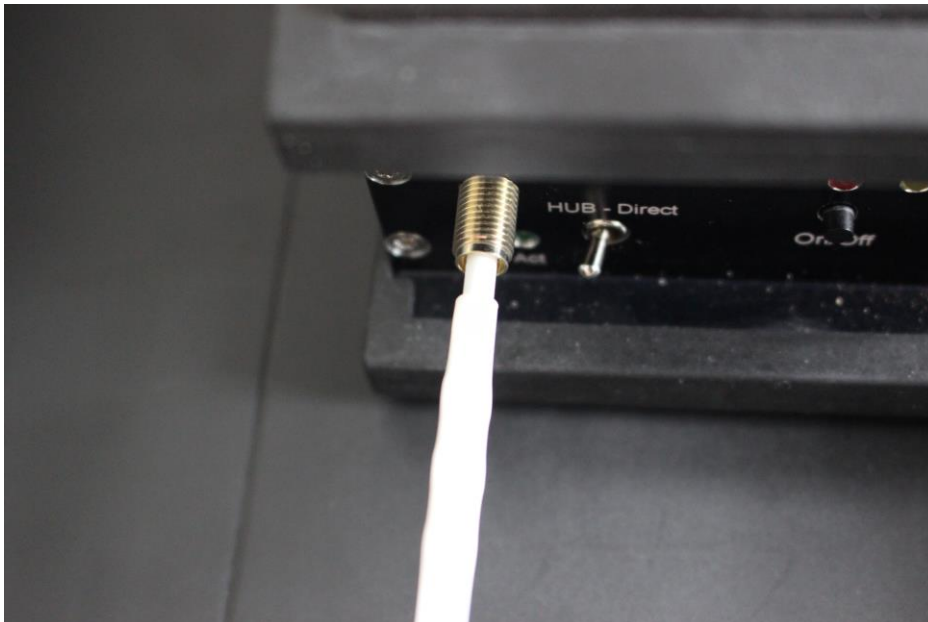

Optical cable connector:

- "Polish" the fiber optic outlet of the fiber cable connector with a lint-free cloth (Safetiss, FiberKleen, etc), moistened with isopropanol.



Protect the FSMA connectors:

The red rubber caps should be placed on the FSMA connectors of the devices when they are not used. The optical fibers also have red protectors which should be applied when the fibers are not in use.



The optical fibers also have red protectors which should be applied when the fibers are not in use.

