

### WARRANTY

All equipment manufactured by **Com-Power Corporation** is warranted against defects in material and workmanship for a period of two (2) years from the date of shipment. Com-Power Corporation will repair or replace any defective item or material if notified within the warranty period.

You will not be charged for warranty service performed at our factory. You must, however, prepay inbound shipping costs and have a return authorization.

This warranty does not apply to:

- a) products damaged during shipment from your plant or ours.
- b) improperly installed products.
- c) products operated outside their specifications.
- d) improperly maintained products.
- e) products which have been modified.
- f) normal wear of material.
- g) calibration.

Any warranties or guarantees, whether expressed or implied, that are not specified set forth herein, will not be considered applicable to any equipment sold or otherwise furnished by Com-Power Corporation. Under no circumstances does Com-Power Corporation recognize or assume any liability for any loss, damage or expense arising either directly or indirectly from the use or handling of products manufactured by Com-Power Corporation, or any inability to use them separately or in combination with other equipment or material.

The warranty is void if items are shipped outside the United States, without prior approval of Com-Power Corporation.

#### **Warranty Limitations**

The above warranty shall not apply to defects resulting from improper or inadequate maintenance by the buyer, unauthorized modification or misuse, operation exceeding specifications, or improper site preparation.

## **SAFETY PRECAUTIONS**

The Model AC-220 Combilog antenna were designed for use in an EMI laboratory to measure or generate electric field.

#### **Test Operator and Test Location:**

The Model AC-220 antenna should be operated by trained personnel in the field of EMC for the purpose of generating electromagnetic fields. Test location should be selected to avoid interference to other equipment and exposure of personnel to high electromagnetic fields

#### **Maintenance and Service:**

There are no user serviceable parts inside the balun. Do not remove the instrument cover. **Com-Power** provides calibration service for all equipment sold. Call the factory if calibration or other service is required.

40.220.0

## About this Manual

This manual provides instructions for testing and using the Combilog antenna model AC-220.

Information contained in this manual is the property of Com-Power Corporation. It is issued with the understanding that none of this material may be reproduced or copied without written permission from Com-Power.

If You Need Assistance

If you encounter problems while using the model AC-220 antenna contact Com-Power Corporation at (949) 587-9800.

# **Contents**

Section			Page
1	General Information		1-1
	1.1 1.2 1.3 1.4	Introduction	1-1 1-2
2	Con	necting Procedures	2-1
	2.0 2.1	Introduction	
3	Theory of Operation		3-1
	3.0 3.1	Overview	
List of	Fi	gures	
	1-1 1-2	Combilog antenna mounted on tripod	
List of	Tal	bles	
	1-1	Equipment Specifications	1-4

# General Information

1

This section includes the following:

- a) Introduction
- b) General Description
- c) Specifications
- d) Equipment Supplied

### 1.1 Introduction

This section contains general description of the Combilog antenna Models AC-220. This section also contains general performance and background information and technical information about the antenna.

## 1.2 General Description

The Model AC-220 Antenna was specifically designed for radiated EMI measurement over a wide frequency range. The Model AC-220 was designed to receive radiated EMI signals or transmit during susceptibility testing for various agency specifications.

This antenna is a broadband transducer which converts Electric field strength in dBuV/m to Volts that can be displayed on a spectrum analyzer or EMI meter.

Further information on the Combilog antenna is given in Section 3.

## 1.3 Equipment Specifications

The functional and operational characteristics of the Model AC-220 Combilog antenna are listed in Table 1-1.



Figure 1-1. Combilog mounted on AT-100 tripod.

## 1.4 Equipment, Accessories, and Documents Supplied

Equipment, accessories, and documents supplied with the model AC-220 Combilog antenna are as follows:

- a) Combilog antenna
- b) Two (2) rear triangle elements w/screws
- c) Tripod mounting adaptor
- d) User's guide
- e) Individual calibration information

**Table 1-1. Equipment Specifications** 

Model: AC-220

Frequency Range: 30 - 2000 MHz
Impedance: 50 ohms nominal
Power Handling: 500 watts CW
Connector: N type (f)
Operating conditions: 0° - 40° C

Weight: 7 lbs.(3.2 kg) max.

Dimensions:

Length 38 in. Width 51 in. Height 28 in.

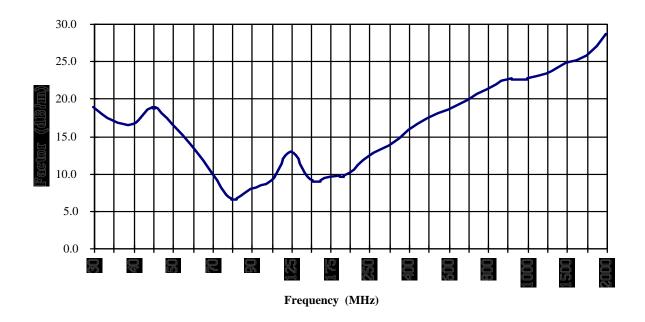


Figure 1-2. AC-220 Typical antenna factor

10.000 G 17 A

# Setup Procedure

2

This section explains the following:

- a) Introduction
- b) Setup

### 2.0 Introduction

This section describes antenna setup and mounting for EMI measurement.

## 2.1 Antenna Setup

### 2.1.1 Connecting

The model AC-220 Combilog antenna has an 'N' type female I/O connector for connection to measuring or source instrumentation.

### 2.1.2 Antenna setup for receiving signals

The model AC-220 antenna can be used to measure EMI from an equipment under test (EUT). The antenna is mounted on either an antenna mast (model AM-400) or an antenna tripod. The antenna has a universal mount (included) for mounting on a tripod (AT-100) or other standard tripod. A cable is used to connect the antenna to the measuring instrument. If a long cable is used, cable loss must be measured and used in calculating the field strength.

#### 2.1.3 Antenna setup for transmitting signals

The model AC-220 antenna can be used to transmit signals. The antenna is mounted on either on an antenna mast (such Model AM-400 antenna mast ) or antenna tripod. To transmit signals, the antenna is connected to a signal generator and power amplifier. The Model AC-220 Combilog antenna can transmit up to 500 Watts continuous power. The field generated by the antenna can be measured by using field strength meter.

1.C.220.C. 17. 1

### 2.1.4 Test location

The Combilog antenna must be mounted and placed in area away from other conductive objects or materials when in use. Large conductive building, structures and electrical cables, can reflect and reradiate the emissions of EUT, causing errors in the test data. In addition, care should be taken to keep measuring instruments and test personnel away from the test area to avoid interference to the test, as well exposure of test personnel to high electromagnetic fields.

# Theory of Operation

3

This chapter explains the following:

- a) Overview
- b) Theory of Operation

## 3.0 Overview

This section describes the theory of operation of the AC-220 Combilog antenna.

## 3.1 Theory of Operation

Broadband antennas allow measurement of signals over a wide frequency range. These antennas do not require any tuning or balun switching during measurement. It is very useful for sweep measurement over the frequency range of operation. Models AC-220 Combilog Antennas is a broadband antenna that operate in the frequency range of 30 MHz to 2000 MHz.

Before the Combilog antennas are used for measurement they have to be calibrated. Typically antenna calibration is performed in an open field test site (OATS). During calibration a known field strength (dBuV/m) is generated around the antenna at each frequency (30 MHz -2000 MHz). The difference between field strength (dBuV) received by the antenna and known field strength generated (dBuV) is the antenna factor (dB) for that frequency. During EMC testing the antenna factor for the frequency of interest is added back to reading on the EMI meter or spectrum analyzer to measure field strength.

dBuV/m (field strength) = dBuV (output measured) + Antenna Factor